







MUOVERE LA PINZA PER REGOLARE LA CORDA ALLA LUNGHEZZA DESIDERATA. PUOI MUOVERE LA PINZA ANCHE **AVVITANDOLA E SVITANDOLA** PER MUOVERLA LUNGO LA CORDA.



TENENDO LA CORDA, TIRARE CON DECISIONE LA BOCCOLA VERSO LA PINZA. QUANDO SI SENTIRÀ UN CLICK, SIGNIFICA CHE LA CORDA È BLOCCATA.



CIRCA 6 MM OLTRE LA BOCCOLA ALTRIMENTI NON SARÀ POSSIBILE INSERIRE I PESI SUCCESSIVAMENTE.



REINSERIRE LA CORDA E I PESI E RIAVVITARE IL TAPPO.

STEP 01

FARE USCIRE LA CORDA DAL

MANICO.

STEP 03

STEP 04

STEP 05

6 mm



## **MODEL EVOLUTION - HOW TO CHANGE ROPE LENGHT**



UNSCREW THE CAP AND REMOVE THE WEIGHT TO EXTRACT THE ROPE.



HOLDING THE ROPE, PUSH THE BUSHING IN THE ARROW DIRECTION. THE GRIPPER IS NOW FREE TO MOVE.



MOVE THE GRIPPER TO SET THE DESIRED ROPE LENGHT. YOU CAN ALSO SCREW AND UNSCREW THE GRIPPER TO MOVE IT ALONG THE ROPE.



HOLDING THE ROPE WITH A HAND, PUSH FIRMLY THE BUSHING IN THE ARROW DIRECTION, INTO THE GRIPPER. YOU'LL HEAR A CLICK WHEN THE GRIPPER IS SUCCESSFULLY BLOCKED.



CUT THE EXCESS ROPE AT 6 MM FROM THE BUSHING, THIS IS
NEEDED FOR THE WEIGHTS TO FIT
IN THE HANDLES.



INSERT BACK THE ROPE AND THE WEIGHT AND SCREW THE CAP IN THE HANDLE.

STEP 01 STEP 03 STEP 04 STEP 05